

note: This unit has been discontinued by the factory in all frequencies. Please replace with a Domino wire type keypad

note: It is easier to match the transmitter code to a desired keypad code rather than trying to find the appropriate keypad code to match a transmitter.

DIGITAL ACCESS CONTROL

Find the antennae wire hanging down from the rear of the motor, within about 2 inches of the antennae wire you will find a recessed area with 3 buttons.

Press and release the **far right button** and listen for one click, go to the keypad and press the **ENTER** button, then your new 4 digit PIN number, then **ENTER ENTER**

Wait approx. one minute and try your new code.

TO CHANGE KEYPAD CODE:

- 1-Call (816)-221-0072 or the nearest Overhead Door showroom, please have a working transmitter and the new PIN number handy.
- 2-Set the transmitter code switches to match the new Pin number.
- 3-Press & release the far right button in the recessed area on the back of the operator & listen for the motor to click once.
- 4-Press the transmitter button & listen for the motor to click twice, press the transmitter button & listen for the motor to click 3 times, press the transmitter button & listen for the motor to click 4 times, press the transmitter button & listen for the motor to click 5 times.

THIS KEYPAD IS NO LONGER SUPPORTED BY THE FACTORY- REPLACE WITH A DOMINO WIRE TYPE KEYPAD